



WATER KITS SUPPLY

ZT Pyrène Aéro Pôle - Téléport 3 - 65290 Juillan – France


Tél : + 33 5 62 95 17 94 Fax: + 33 5 62 95 34 27 Email : contact@water-kits.fr

pH ON FABRIC

Add a few drops of Universal pH indicator on the fabric to be tested, wait 10 seconds and compare with the color card supplied.



pH 4 : Too low

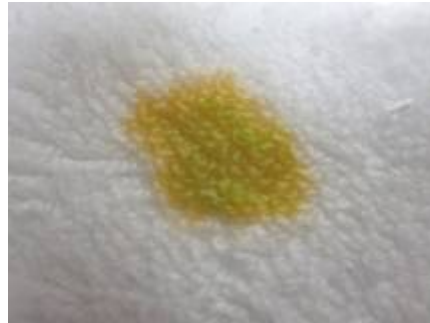

pH 6 – 6,5 : Correct pH



pH 10 : Too high

